



# T4300A T4300A-V T4300 Skeet



Long Range LLC. 26 Tannery Street Franklin, NH 03235

# Introduction

---

The T4300A and T4300A-V are simple to use transmitters that can control 2 trap machines with the push of a button. The T4300A-V has the added ability to launch targets using voice control. Both transmitters require a 9-volt battery and an antennae.



Press any button to power on the transmitter. Be aware the this first button press, even though the device is off, will fire the corresponding trap or traps. The **Red Power LED** will illuminate to let you know that the device is on and ready to launch the second target.

The T4300A-V has a microphone included. For best results, clip this microphone to the lapel of vest or shirt, about 6-9 inches from your mouth.

## Button Operation (T4300A & T4300A-V)

Press **Trap 1** or **Trap 2** to fire the corresponding trap. The **Green TX LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire. Press the **Doubles Button** to fire a True Pair, which will fire both traps simultaneously.

## Voice Operation (T4300A-V Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4300A-V and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The T4300A-V can be clipped to a belt or put in a pocket of a shooting vest.

Once the microphone is plugged into the **Microphone Jack**, the T4300A-V automatically enters voice activation mode. To fire a single target, press either **Trap 1** or **Trap 2**. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

To fire both traps simultaneously, press the **Doubles** button. This arms the device but does not fire the traps. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire both trap 1 and trap 2. The traps will fire and the **Green Tx Light** will go out until another button is pressed.

## Lock On Mode (T4300A-V Only)

---

The **Lock On Mode** is a feature of the T4300A-V and is used in conjunction with voice operation. **Lock On Mode** allows **Trap 1**, **Trap 2**, or **Doubles** to be locked in and launched with a verbal command without pressing a button each time.

To lock in a trap or a true pair, press and hold either **Trap 1**, **Trap 2**, or **Doubles** until the **Green Tx LED** flashes (4 seconds). The selected trap(s) are now locked in. When ready, call "Pull" in a normal tone of voice to fire the designated trap(s). The Trap(s) will fire and the **Green Tx Light** will go out. After 4 seconds, the **Green Tx Light** will begin to flash again and the T4300A-V will be ready to fire the same trap(s). To exit **Lock On Mode**, press any button.

## Report Mode (T4300A-V Only)

---

**Report Mode** is a feature of the T4300A-V and is used in conjunction with voice operation. **Report Mode** allows shooter to call for one trap and have the other trap fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire (**Trap 1** or **Trap 2**). The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press the other trap button. This will be the trap that fires on the report of the gun. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. On the sound of the gun, the second trap will fire.

## Skeet Sequence Mode (T4300A-V Only)

The T4300A-V has the **Skeet Sequence** preloaded. This is designed for solo shooters to go out without a trapper for practice.

To activate **Skeet Sequence Mode**, press and hold the **Doubles** button for 6 seconds until the **Green Tx LED** blinks rapidly. Be aware that while holding the **Doubles** button, the **Green Tx LED** will begin to blink after 4 seconds when it enters **Lock On Mode**. Continue to hold down the **Doubles** button until it blinks rapidly.

The T4300A-V is now in **Skeet Sequence Mode**. When you are ready, call "Pull" in a normal tone of voice to fire a high house. The second call will release a low house and the third call will release a double. The T4300A-V is now ready for stand 2. Continue through the stands and the T4300A-V will launch the appropriate trap(s) in the sequence.

At any time during the round, you may press any of the 3 buttons to throw the **option bird**. After the **option bird** is thrown, the unit will resume the skeet sequence.

 
The T4300A-V will end the sequence after launching the low bird on **Station 8**. To throw a **low 8 option**, press the **Low House** button and call "pull".

To exit **Skeet Sequence Mode** at any time, press and hold the **Doubles** button until the **Green Tx LED** turns off.

fi

ff

fi



# Trouble Shooting

## Frequently Asked Questions

Questions	Answers
What should I do if my T4300A isn't turning on?	Be sure that the T4300A has a fresh 9-volt battery.
What should I do if my T4300A isn't working?	First, ensure that your T4300A is set to the same <b>Channel</b> as the trap that you are trying to fire. Second, ensure that your T4300A is set to the correct <b>Message Length</b> .  Please refer to the <b>Dip Switches Manual</b> included with your device.

## Safety Warning

Long Range LLC's equipment is used to wirelessly activate clay target machines. Certain safety precautions should always be practiced while installing and/or using Long Range LLC equipment on automatic trap machines. Always stay clear of the trap while installing or operating Long Range LLC equipment.

Long Range LLC equipment is designed to work with manufactured clay target machines and holds no responsibility for damages caused by modified machines or using the equipment for purposes other than which it is designed for.

Please do not disassemble or modify the equipment. Long Range LLC does not bear any responsibility with respect to breakdowns or damages due to disassembling or modifying the equipment.

## Contact

Please call us with any questions. Your satisfaction is our priority.

Call toll free:  
1 800 987-6749, Monday-Friday 8:30am-4:30pm EST

Website:  
<http://www.longrangellc.com>

**MAIL TO:** **Long Range LLC.**  
26 Tannery St.  
Franklin, NH 03235

Please carefully pack and ship, prepaid and insured, to Long Range LLC.